



Jandy® Leaf-B-Gone™ Hydrostatic Valve Installation Instructions

1. Remove the 1-1/2" plug from inside the bottom of the Jandy Leaf-B-Gone floor canister or, if installing the molded floor canister, cut the stub-out at the scored line.

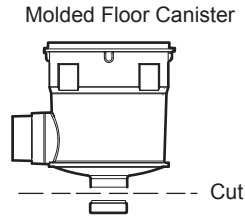

2. Thread the hydrostatic valve into the bottom of the floor canister.
3. Use standard PVC glue to attach the collection tube to the valve through the bottom of the floor canister.

4. Excavate a gravel sump, 24" long x 24" wide x 24" deep, and fill with 3/4" gravel.
5. Place floor canister into the excavated sump, connect to deck canister line and backfill. Floor canister should sit flush with final finish level.

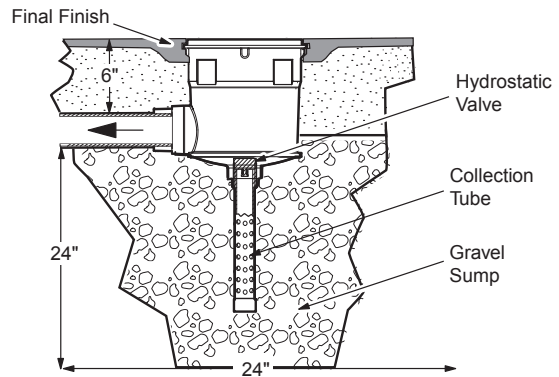


ZODIAC POOL SYSTEMS, INC.

2620 Commerce Way, Vista, CA 92081-8483 · 760-599-9600 · 1-800-822-7933 · www.jandy.com

© 2009 Zodiac Pool Systems, Inc. All rights reserved. TL-1313 Rev A 12/09


Jandy® Leaf-B-Gone™ Hydrostatic Valve Installation Instructions

1. Remove the 1-1/2" plug from inside the bottom of the Jandy Leaf-B-Gone floor canister or, if installing the molded floor canister, cut the stub-out at the scored line.

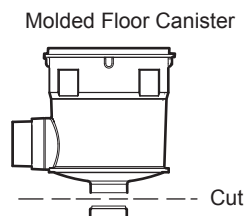

2. Thread the hydrostatic valve into the bottom of the floor canister.
3. Use standard PVC glue to attach the collection tube to the valve through the bottom of the floor canister.

4. Excavate a gravel sump, 24" long x 24" wide x 24" deep, and fill with 3/4" gravel.
5. Place floor canister into the excavated sump, connect to deck canister line and backfill. Floor canister should sit flush with final finish level.

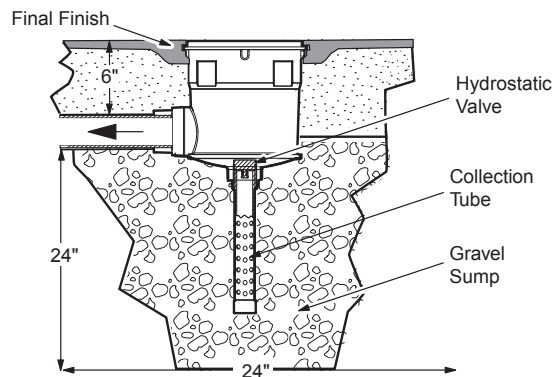

ZODIAC POOL SYSTEMS, INC.

2620 Commerce Way, Vista, CA 92081-8483 · 760-599-9600 · 1-800-822-7933 · www.jandy.com

© 2009 Zodiac Pool Systems, Inc. All rights reserved. TL-1313 Rev A 12/09